




For suggestions
and improvements
please contact
me at
bernd.wiebus@gmx.de

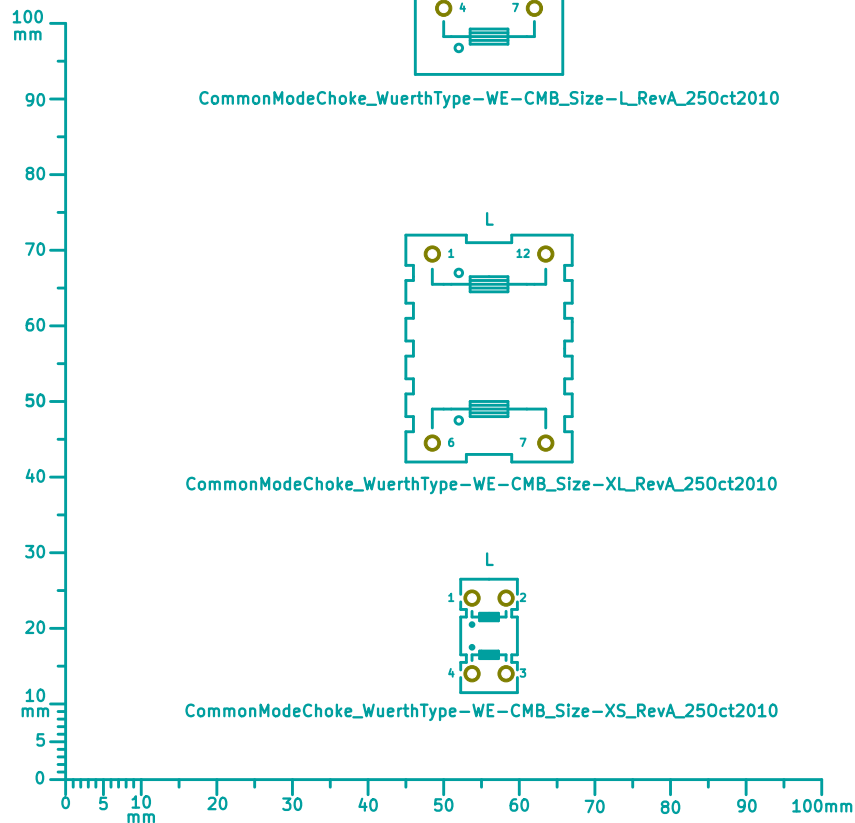


1:1 Print! Check dimension by controlling the gauge!

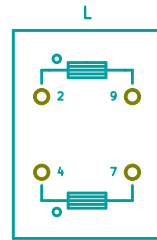


CommonModeChoke_WuerthType-WE-CMB_Size-L_RevA_250Oct2010




CommonModeChoke_WuerthType-WE-CMB_Size-M_RevA_250Oct2010

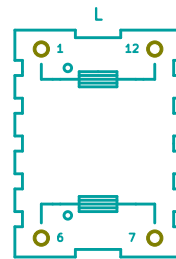


CommonModeChoke_WuerthType-WE-CMB_Size-XL_RevA_250Oct2010



CommonModeChoke_WuerthType-WE-CMB_Size-S_RevA_250Oct2010



CommonModeChoke_WuerthType-WE-CMB_Size-XS_RevA_250Oct2010

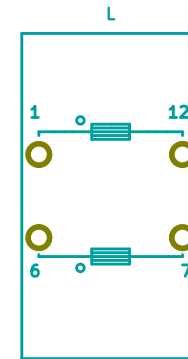

CommonModeChoke_WuerthType-WE-CMB_Size-XXL_RevA_250Oct2010

KiCAD Footprints of some common mode chokes (Manufactured by Würth) from the file

CommonModeChoke_Wuerth_Type-WE-CMB_RevA_24Oct2010.mod

Author: Bernd Wiebus / Uedem / Germany / 24th Oct 2010

Licence: CC-Zero / Public Domain

NO RESTRICTION ! NO WARRANTY!

<http://creativecommons.org/>



File: CommonModeChoke_Wuerth_Type-WE-CMB_RevA_24Oct2010.brd	
Sheet:	
Title:	
Size: A4	Date: 4 apr 2013
KiCad E.D.A.	Rev: 1/1