


You can use an empty modul if you want some parts at the schematic, but not at the layout.

Netties are some "devices" with two and more separated pads and a connection between them. They are used to tie different ground system as signal ground and digital grond together at only one point.

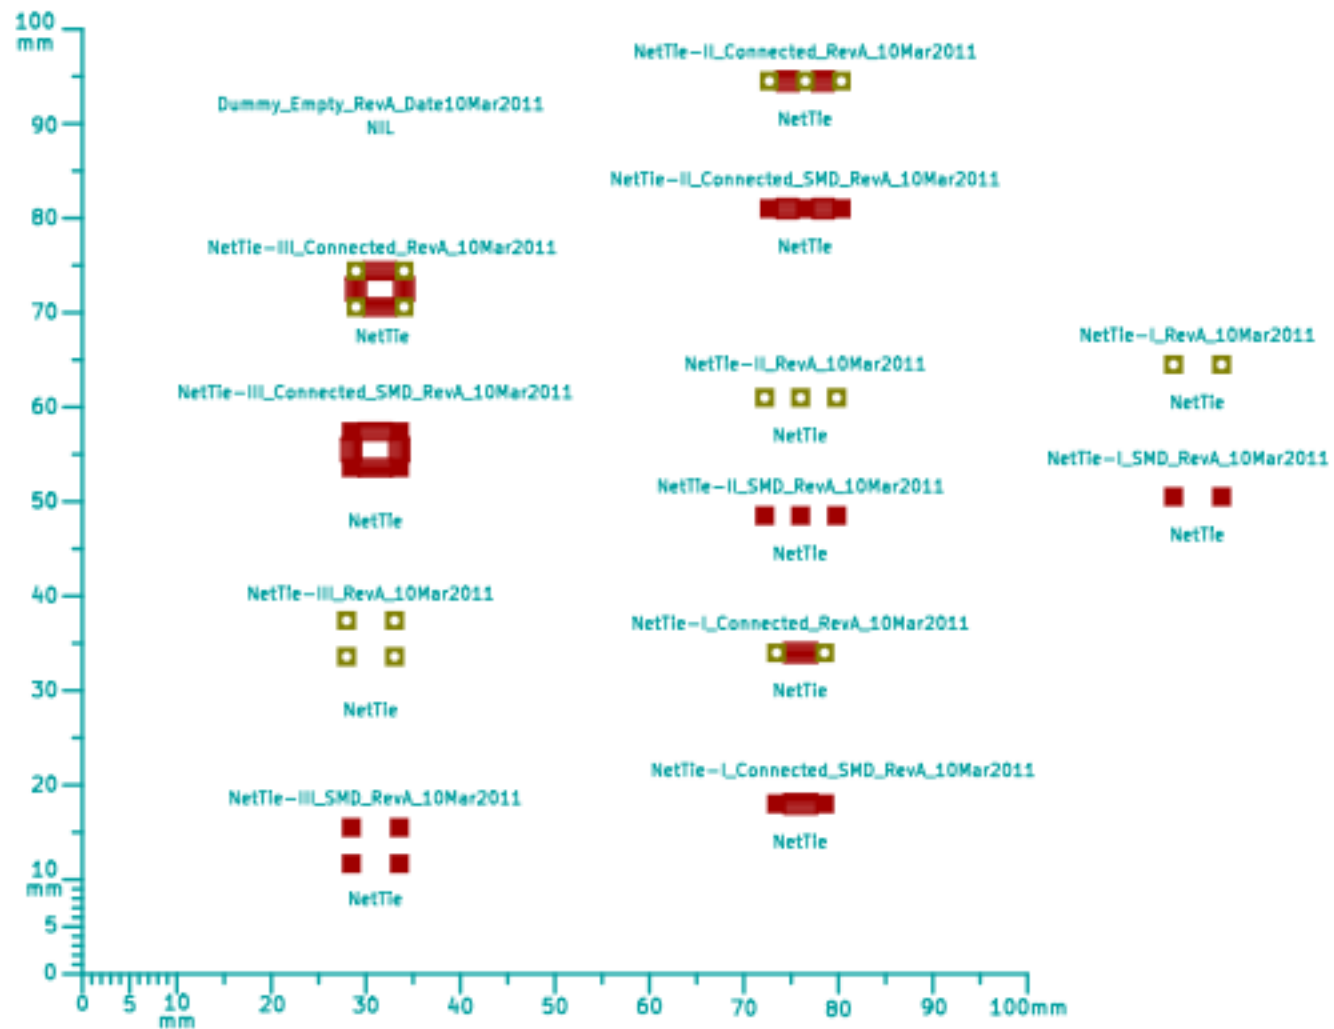

1:1 Print! Check dimension by controlling the gauge!

KiCAD Footprints of some oddities from the file Oddities_RevA_10Mar2011.mod

Author: Bernd Wiebus / Uedem / Germany / 10th Mar 2011

*For suggestions
and improvements
please contact
me at
bernd.wiebus@gmx.de*



Licence: CC-Zero / Public Domain
NO RESTRICTION ! NO WARRANTY!
<http://creativecommons.org/>

File: Oddities_RevA_10Mar2011.kicad_pcb		
Sheet:		
Title:		
Size: A4	Date: 6 Jun 2013	Rev:
KiCad E.D.A.		Id: 1/1